



*keeping your home
safe and clean*



USERS MANUAL

Air Purifier

Model: PURE126 & PURE155



Read This Manual

Inside you will find many helpful hints on how to use and maintain your dehumidifier properly. Just a little preventative care on your part can save you a great deal of time and money over the life of your dehumidifier. You'll find many answers to common problems in the chart of troubleshooting tips. Review the chart of Troubleshooting Tips before calling your service engineers.

<p>ECOAIR TECHNICAL SUPPORT UK TEL: +44 208 459 2458 EMAIL: technical@ecoair.org</p>

IMPORTANT SAFETY INSTRUCTIONS	1
BS PLUG WIRING	2
INTRODUCTION	3
HOW IT WORKS	4
OPERATION	4
FILTER CHANGE SCHEDULE	6
FILTER REPLACEMENT	6
CLEANING THE UNIT	7
STORAGE	7
TECHNICAL SPECIFICATION	8
REPLACEMENT PARTS	8
REMOTE CONTROL	8
SERVICE AND WARRANTY	9

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING.

WARNING - This appliance is intended for use in a domestic environment and smaller office use only. Any other use is not recommended by the manufacturer and may cause fire, electrical shocks or other injury to person or property.

When using electrical appliances, basic safety precautions should always be followed:

1. Do not operate the unit with a damaged cord or plug, after it malfunctions or has been dropped or damaged in any way. Return to an authorized service facility for examination and repair.
2. This unit should always be kept in an upright position to avoid any damage. The appliance must be placed on a level flat surface during operation.
3. Check the household voltage to ensure it matches the units rated specification before operating.
4. Operate this unit in an ambient temperature between 5°C to 35°C.
5. Ensure that the air inlets and outlets are not blocked or covered.
6. Never place anything on top of the unit and do not cover with any kind of material while in use.
7. This product is intended for domestic and smaller office use **ONLY** and not for commercial, industrial or outdoor use.
8. To protect against electrical shocks, do not immerse unit, plug or cord in water, or spray with liquids.
9. Never unplug the power cord without press the "ON/OFF" key to off first, as this could damage the unit.
10. Always unplug the unit when not in use or moving location. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
11. Close supervision is necessary when any appliance is used by or near children and pets.
12. Do not run power cord under carpeting, or cover with rugs or runners. Arrange the cord away from areas where it may be tripped over.
13. Never operate or store the unit in direct sunlight.
14. To repair the unit, take it to a qualified service engineer. Repairs carried out by unqualified people may cause damage to the unit or injury to persons or property and void the warranty.
15. Where possible, avoid the use of an extension cable as they may overheat and cause a risk of fire. Only use an extension cord after ensuring it is in perfect condition.
16. Do not use the unit without the air filter. Check and replace the Filter every 3-6 months. Check and clean the Nano Silver Filter every two weeks.
17. Read all instructions before operating the air cleaner.
18. Place the air cleaner where it is not easily knocked over by persons in the household.
19. **ALWAYS** unplug air cleaner when not in use.
20. Keep the power cord away from heated surfaces.
21. **DO NOT** use the unit at outdoor area.
22. **NEVER** use the unit unless it is fully assembled.
23. **DO NOT** use the unit where combustible gases or vapors are present.
24. **DO NOT** expose the air cleaner to rain, or use near water, in a bathroom, laundry area or other damp locations.
25. A loose fit between the plug and the AC outlet (receptacle) may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn receptacles.
26. **DO NOT** sit, stand or place heavy objects on the air cleaner.
27. **ALWAYS** disconnect power supply before servicing.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

SAVE AND READ THESE IMPORTANT SAFETY INSTRUCTIONS


WARNING: To reduce the risk of fire or electric shock,
DO NOT use this product with any solid-state speed control device.

BS PLUG WIRING

Wiring Instructions: Should it be necessary to change the plug please note the wires in the mains lead are coloured in accordance with the following code:


BLUE - NEUTRAL
BROWN - LIVE
GREEN AND YELLOW - EARTH


As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

1. The **BLUE** wire is the **NEUTRAL** and must be connected to the terminal which is marked with the letter **N** or coloured **BLACK**.
2. The **BROWN** wire is the **LIVE** and must be connected to the terminal which is marked with the letter **L** or coloured **RED**.
3. The **GREEN/YELLOW** is the **EARTH** and must be connected to the terminal which is marked with the letter **E** or  or coloured **GREEN OR GREEN/YELLOW**.
4. Always ensure that the cord grip is positioned and fastened correctly.

If a **3A (BS 1363)** fused plug is used it must be fitted with a **3A** fuse. If in doubt consult a qualified electrician.

Wiring for a 3 Amp Plug (BS1363)

Please note. The Earth Terminal is marked with the letter **E** or  Earth Symbol.

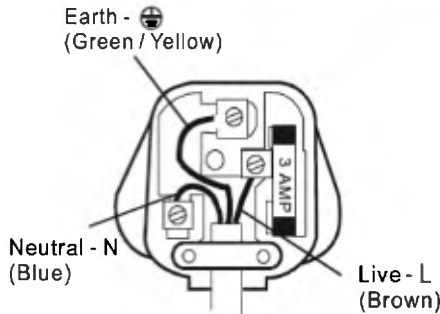


INTRODUCTION

Congratulations!

You have purchased the EcoAir Air Purifier product. We highly recommend that you operate the Air Purifier 24 hours a day, because indoor air can be quickly contaminated by activity or objects in a room and infiltration of outside air. This air purifier are much more effective in rooms where all doors and windows are closed.



HOW IT WORKS

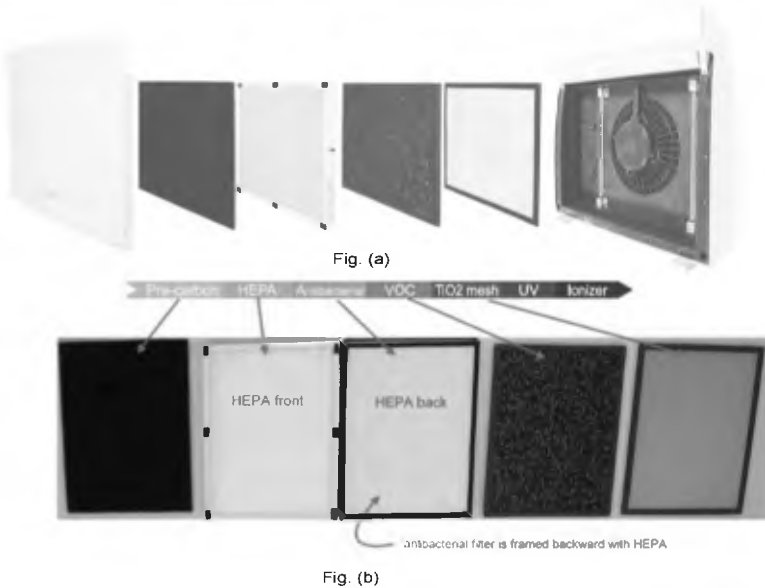


- 1 EcoAir Whisper-Quiet Fan draws into the unit quietly.
2. Advanced Activated Carbon Pre-Filter reduces cooking, tobacco and pet odors. Also captures large dust particles, lint and pet hair from dirty air.
3. HEPA Filter effectively captures 99.97% of particles as small as 0.1 micron in size that pass through the filter.
4. Photocatalyst TiO₂ Filter+ UV light reduces organic pollutant such as formaldehyde, benzene and ammonia. It also inactivates bacteria and virus. Ionizer distributes negative ions throughout the room to enhance the cleaning process while freshening the air.
5. Effective Airflow Design promptly exhausts clean, purified air back into the room. It also avoids stirring up settled particles.

OPERATION

CAUTION! NEVER operate the Air Purifier without the HEPA filter properly installed. Permanent motor damage could result.

Each time you start the Air Purifier, it is a good idea to run it at HI speed for a few seconds for fast, initial cleaning. Then set to MED or LO as desired.

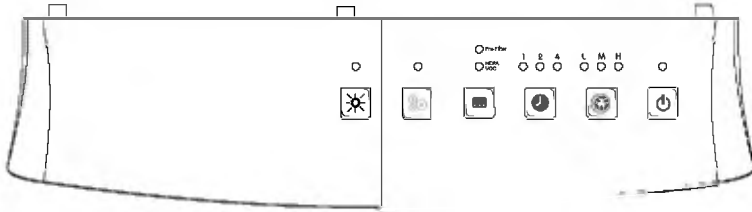

This Air Purifier is equipped with a Carbon Filter, a HEPA Filter, a VOC Filter, a TiO₂ Filter, UV Light and Ionizer features.

Ensure all the filters are in position as Fig. (a) on page 4.

Plug the power cord correctly into an electrical outlet.



Power Button

Press the power button to turn on the air purifier. Press the same button again to turn off the air purifier.



Fan Button

Press the fan button to select the fan speed:

L (low) → M (medium) → H (high)



Clock Button

Press the clock button to select the timer-off function:

1 → 2 → 4

The timer-off can be selected from 1 hour to 7 hour. The air purifier will automatically turn off when it runs for the selected hours.



Ionizer Button

Press the ion button to turn on the ionizer function.
Press the button again to turn this function off.



UV Button

Press the UV button to turn on the UV function.
Press the button again to turn this function off.



Filter Indicators Button

The filter indicators will light up when the filters need to be replaced.
Hold the filter button for several seconds until the filter indicator shuts off. This will reset the hours of use timer.

FILTER CHANGE SCHEDULE

The usable lifetime of the Advance Activated Carbon Pre-Filter is 1400 hours & usable life time of HEPA Filter, VOC Filter and TiO₂ Filter is 2800 hours each, depending upon the level of the room's air contaminants and the frequency of use.

The HEPA filter will turn medium brown and air volume will begin to decrease dramatically when the filter needs to be changed.

You should have a spare filter available for later replacement.

FILTER REPLACEMENT

This filter is specially designed for easy replacement to provide maximum performance.
THE FILTERS ARE NOT WASHABLE.


1. When the check filter light is illuminated, you should open the front grill and replace the filter.
2. When you change the filter, touch the Filter Icon for 3 seconds to reset & start new counting cycle of the filter life.
3. Turn the air cleaner OFF and unplug it from the power outlet.
4. Place one hand on middle top of the cover, insert your finger on the slot at the side of the air cleaner & pull the front cover outwards as Fig. 1 and remove the front cover as Fig. 2.
5. Remove and discard used filter as Fig. 3.
6. Remove any plastic protective wrapping and packaging from the new filter.
7. Set new filter into the air cleaner as Fig 4.
8. Install the Front Grille by engaging its tabs into the bottom slots on the unit. Then swing grille up and gently push in top to snap into place.
9. Plug the air cleaner into an outlet for operation.

Press on top cover.



Pull outwards

Fig. 1

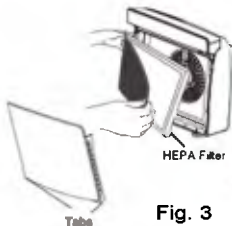

Tab

Fig. 3



Slots

Fig. 4

CLEANING THE UNIT

WARNING: To avoid serious injury from electric shock ALWAYS turn the Air Purifier OFF and disconnect the plug from the outlet BEFORE cleaning.

1. Turn Air Cleaner OFF and unplug from outlet.
2. Clean unit with a moistened soft cloth only. DO NOT pour or splash water on the unit or use any abrasive-type cleaner on it. Clean all external surfaces, especially the air intake grilles and air outlet.
3. DO NOT attempt to clean the filter; it IS NOT washable and washing will damage it.
4. Reposition Air Purifier plug into power outlet and turn ON.

STORAGE

If you store your Air Purifier for more than 30 days you should:

1. Remove the filter from the unit.
2. Wrap the filter in an air-tight plastic bag or plastic wrap. Be sure that the filter is totally sealed to protect it from its storage environment.
3. DO NOT put the plastic-wrapped filter back into the Air Purifier.
4. To restore the Air Purifier to service:
 - Unwrap the Filtrete filter.
 - Install filter assembly in the air cleaner. See “Filter Replacement” section for proper installation.


TECHNICAL SPECIFICATION

MODEL	PURE126	PURE155
Length	43.2 cm	55.9 cm
Width	19.5 cm	24.1 cm
Height	40.5 cm	47.2 cm
Weight	5 Kg	7.7 Kg
Input Voltage	AC 220-240 V 50Hz	AC 220-240 V 50Hz

REPLACEMENT PARTS

- 1) Carbon Pre-Filter
- 2) HEPA Filter
- 3) VOC Filter
- 4) TiO₂ Filter

REMOTE CONTROL

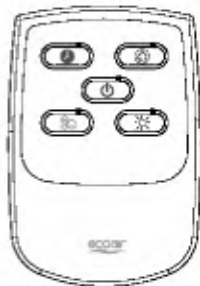

Battery Size: UM-4 (AAA) x2

Notes:

- Alkaline battery is recommended. Batteries for Remote Control not included.
- Do not charge dry battery.
- When you do not use the remote control for a long time, remove the battery to avoid any damage caused by battery leakage and subsequent corrosion.

ONE (1) YEAR LIMITED WARRANTY Save This Warranty Information

Eco Air guarantees this product free from defects in materials and workmanship for a period of one (1) year from the date of purchase. Coverage is valid only with proof of purchase.

This unit must be operated under conditions as recommended, at voltage indicated on the unit. Any attempts made to service or modify the unit, will render this WARRANTY VOID. The actual product may differ slightly from illustration. This warranty is in addition to, and does not affect, your statutory rights.

For further information, please contact 020 8459 2458.

This product has been manufactured to comply with the EC Directives 2006/95/EC and 2004/108/EC.

We recommend that you note the details of your purchase below and retain your original proof of purchase receipt with this manual. Keep these documents safe in the event of a warranty claim.

Date of purchase: _____
Retailer name: _____
Serial number: _____



*keeping your home
safe and clean*



Copyright Reserved

